

## **Ferroli Optimax f12 code= pcb confused.**

To reprogram you press reset for ten seconds and TS appears.

Press reset for one second and P01 appears.

Press heating + and p02 appears.

Press hot water + and 0 codes appear.

Then press up or down on heating + or - to get o1 .

Then press reset for ten seconds.

Job done.